
## 804 NEWJET

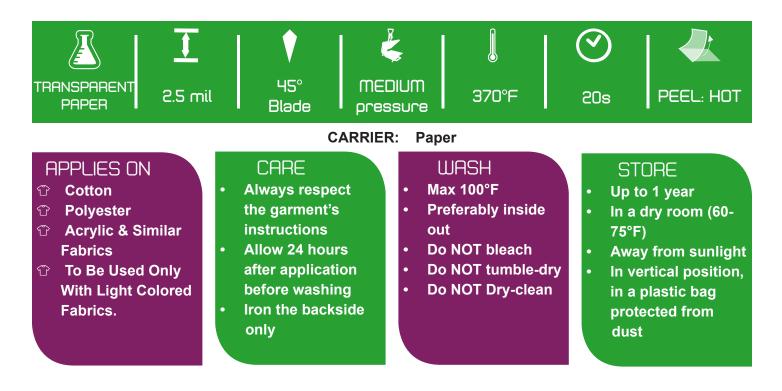

## APPLICATION

- 1. Print your design in reverse (mirror). NOTE: It is recommended to use OEM printer inks. Printable medias are very sensitive: always handle with care, preferably with gloves.
- 2. Cut the excess material with scissors only.
- 3. Position and heat press your design on the garment protected by a silicone paper at 370°F–20 seconds medium pressure.
- 4. Peel off firmly and continuously the paper carrier immediately after heat pressing, starting from one edge.

